


Fig. 7

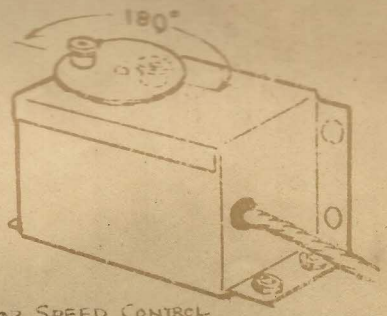

MOTOR SPEED CONTROL SEQUENCE CAN BE REVERSED BY RESETTING THE CRANK WHEEL AS SHOWN IN ABOVE FIGURE.

Fig.8.

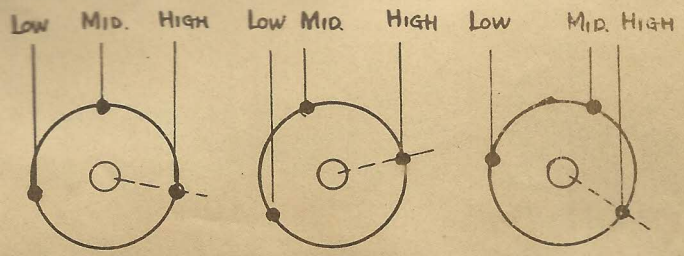


Fig. 9

No parts of the OS proportional servo SP-203 & SP-102M, neither internal nor external require any adjustment. The internal parts are especially complicated, DO NOT DISASSEMBLE either unit.

MOUNTING OF RECEIVER

Mounting is made in the same way as the conventional receiver. Make certain that even minor vibration of the model does not inflict on the receiver by mounting it in foam rubber or sponge.

Note: Use receiver with the antenna fully extended.

OGAWA MODEL MFG. CO., LTD.
Hiranobaba, Higashi-sumiyoshi
Osaka, Japan