








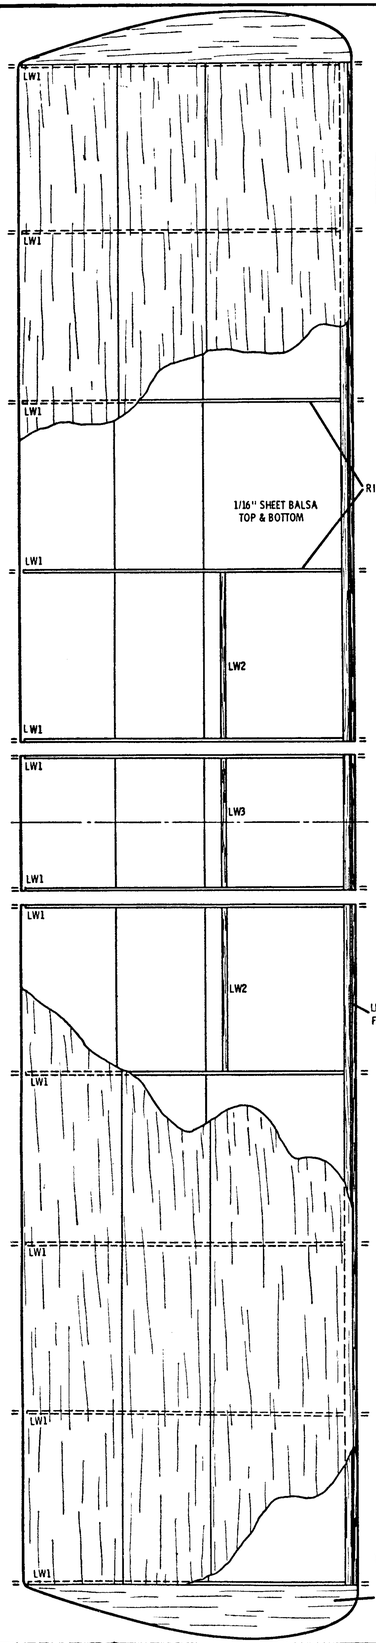


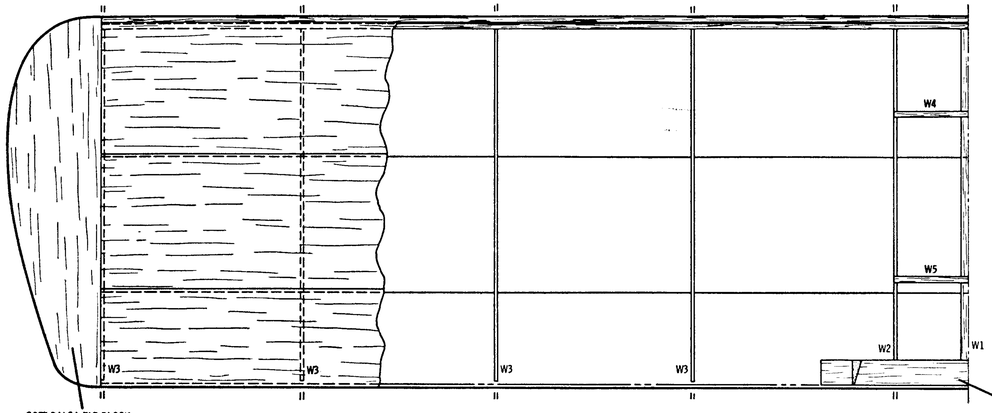

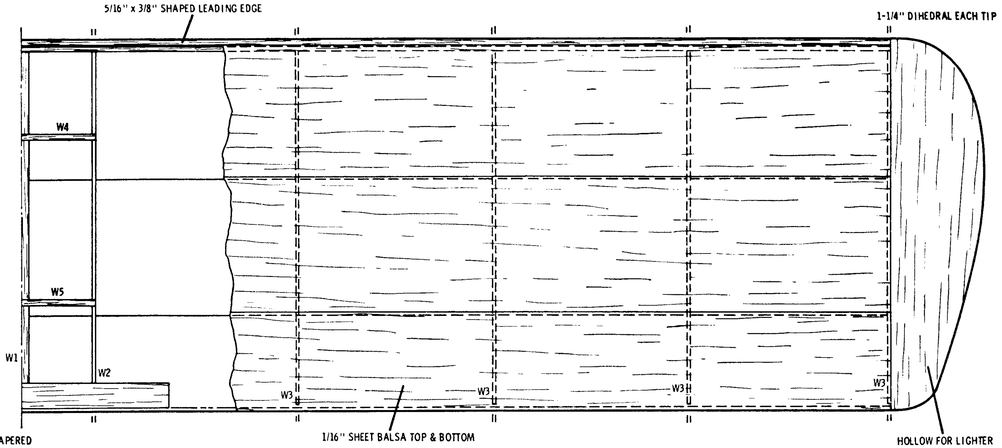







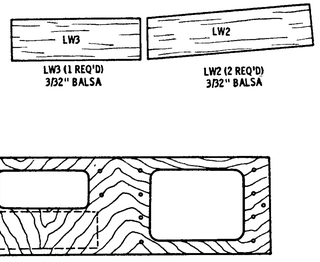


WING CONSTRUCTION: CUT BOTTOM SHEETING TO PROPER WIDTH & CEMENT TOGETHER. PIN BOTTOM SHEETING TO BENCH & GLUE RIBS IN PLACE. ADD BRACING IN CENTER SECTION. TILT CENTER RIBS TO FORM CORRECT DIHEDRAL ANGLE. ADD TOP SHEETING AND THEN GLUE PANELS TOGETHER BLOCKING TIP RIB FOR CORRECT DIHEDRAL. CENTER SECTION JOINTS SHOULD BE TAPED WITH CLOTH FOR ADDED STRENGTH. ADD TIP BLOCKS AND SAND ENTIRE WING.

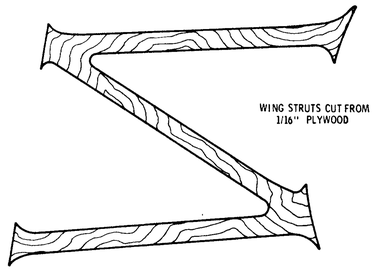


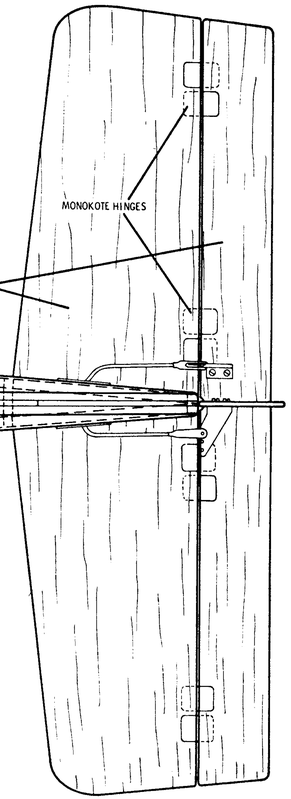

BONNER 4RS RECEIVER & SERVO TRAY 1/16" PLY

1/2° TO 1-1/2° RIGHT THRUST DEPENDING ON INDIVIDUAL CHARACTERISTICS OF MODEL (START WITH 1° & VARY AS REQUIRED)

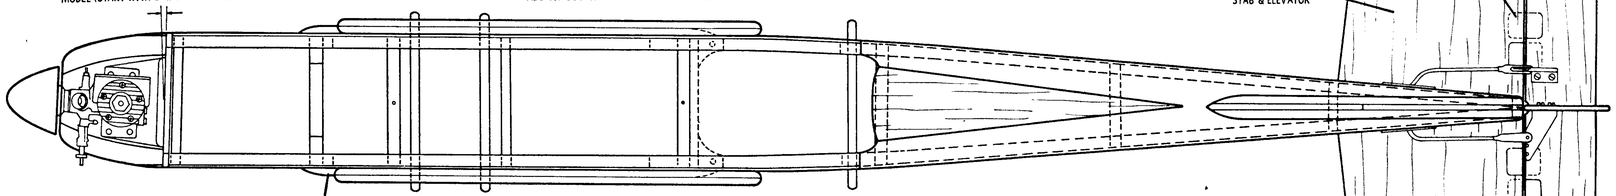

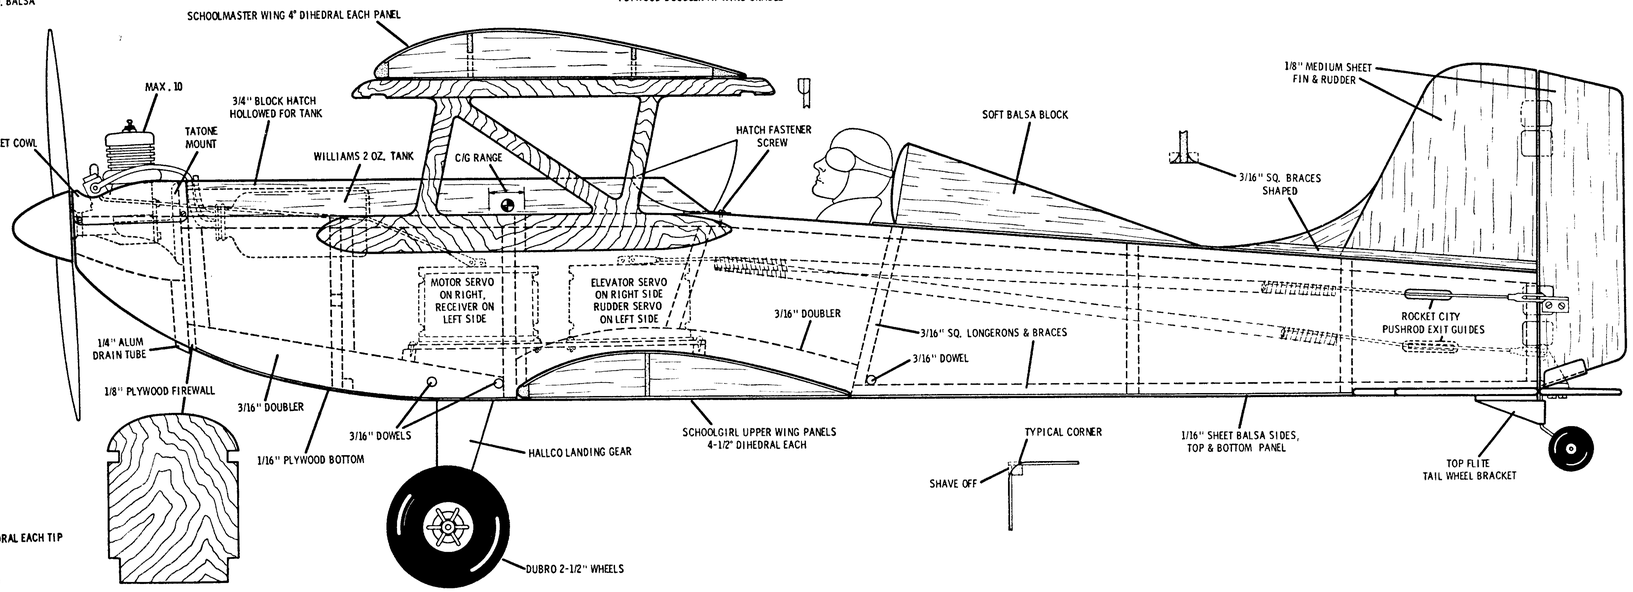

CLASSMATE

