
BOTTOM WING
6mm DEPRON

Do not cut foam out. Just Mark the foam for the position of collar.

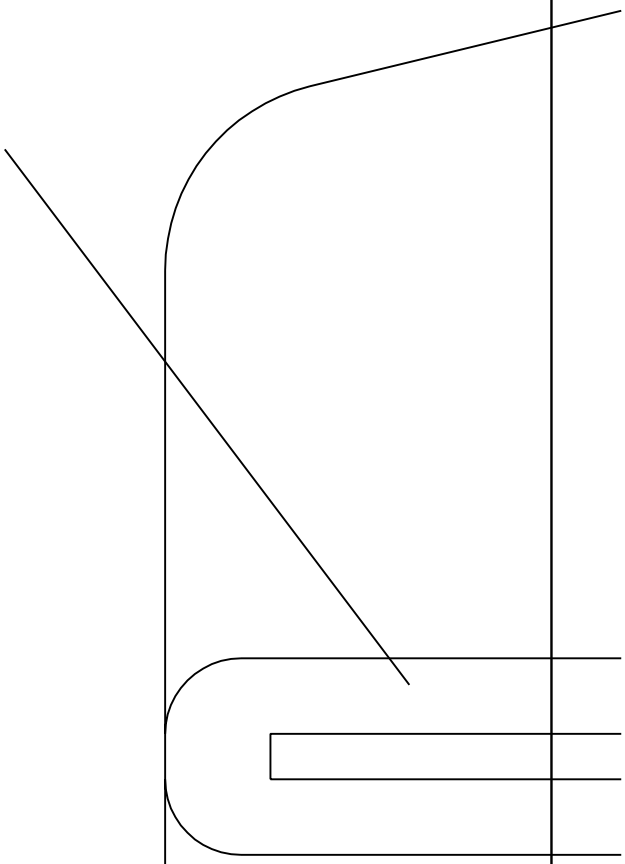

Half wing shown, flip template over to mark other half