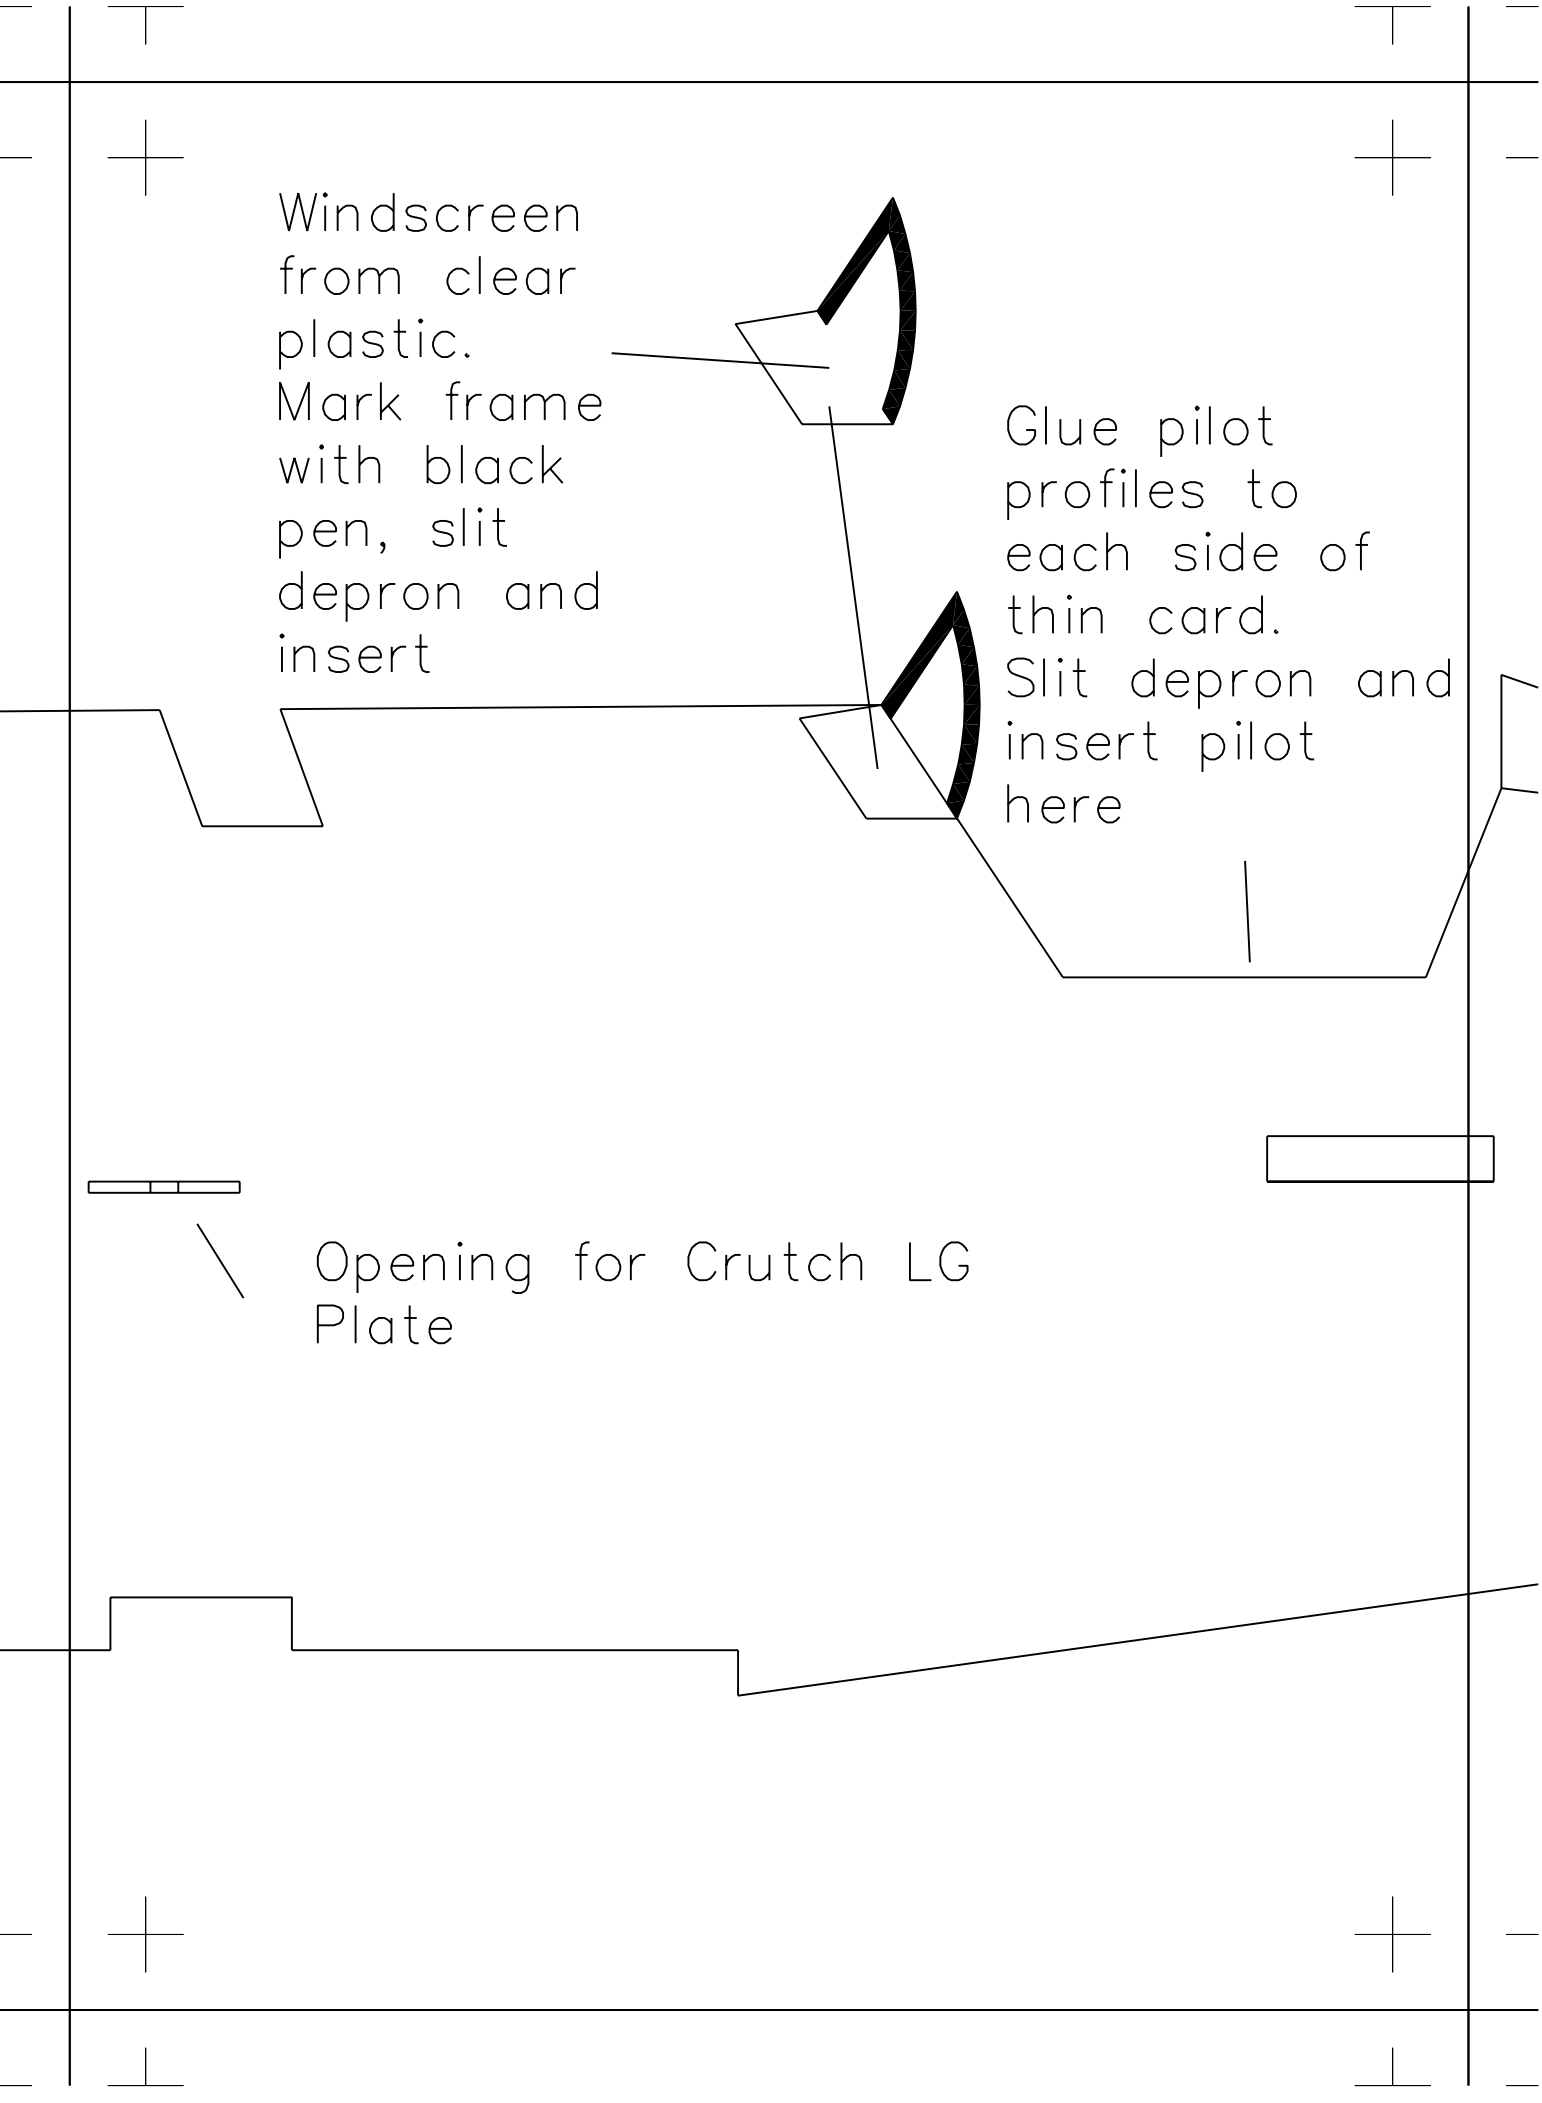

Windscreen from clear plastic. Mark frame with black pen, slit depron and insert
Glue pilot profiles to each side of thin card. Slit depron and insert pilot here
Opening for Crutch LG Plate