


UPPER FUSELAGE CORE.
6mm DEPRON 6 Off.
3mm DEPRON 2 Off.
Make 2 stacks of 3-6-6-6
before joining stacks together
with 3mm layers to outside.

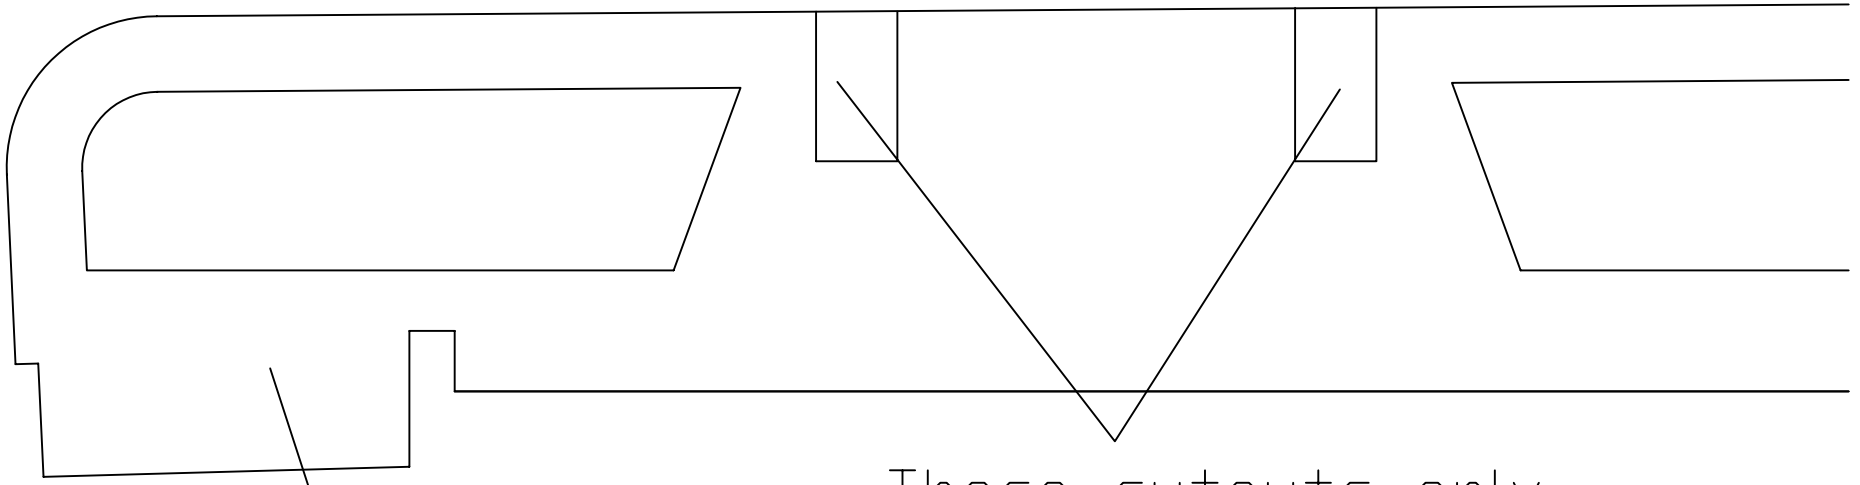