


BULKHEADS 2 Off.
6mm DEPRON.
These join the upper
and lower core
assemblies.

LOWER FUSELAGE CORE.
6mm DEPRON 6 Off.
3mm DEPRON 2 Off.
Make 2 stacks of 3-6-6-6
before joining stacks together
with 3 layers to outside.

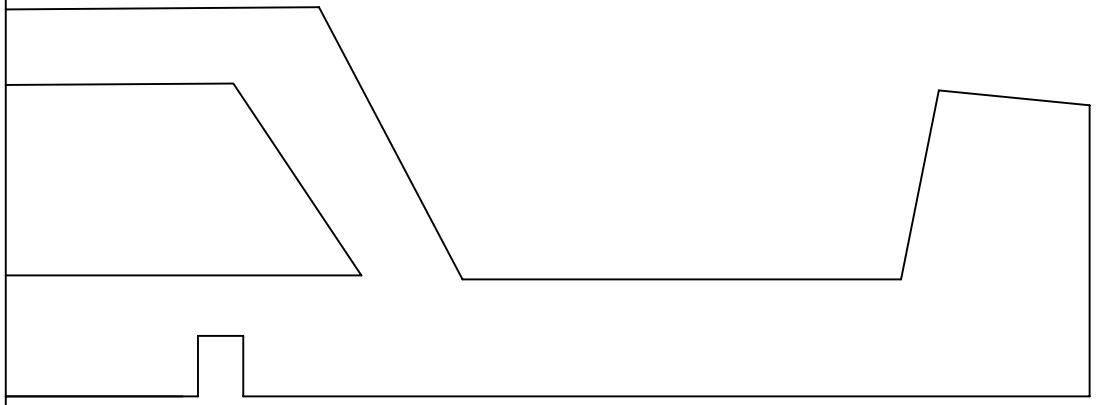